



VIDEO TUTORIAL






DC656V Vibration
Anti Bark Collar User's Manual

Product Manual

Please Read this Manual Carefully Before Use

Thank you for purchasing the anti bark collar

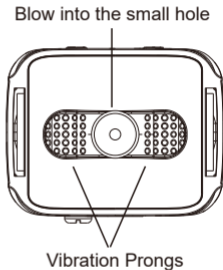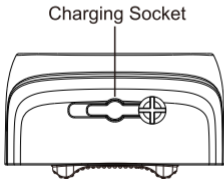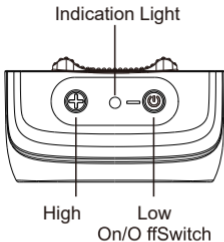

Step1

Charge



Step2

Adjust the strap



Step3

Test it manually, please refer to the diagram on page 4 for the test result.

Press and hold for 3 seconds



Adjust sensitivity

Press "+" "-" to adjust the sensitivity



Blowing into a small hole



🔊 Vibrate

🔊 Beep sound

Introduction:

The intelligent Anti Back Collar stops barking with progressively increasing sound and vibration stimulation it is humane and safe and does not use static shock stimulation.

The anti bark collar is easy to use and test.

The collar is activated by your dog's barking.

A microprocessor distinguishes your dog's bark from other environmental noises and automatically delivers sound and vibration after each bark.

Important Note:

PLEASE ENSURE THAT THE COLLAR IS FITTED CORRECTLY.

When the collar is fitted correctly, it will not move on your dog's neck.

Otherwise, it may be activated randomly even if your dog isn't barking.

Please position the collar snugly around the throat.

Advantages

- * No Shock, sound and vibration function.
- * Prongs-Free Design to protect your dog

The collar for every weather: rainproof, mud-resistant, snow proof

* The smallest collar for small dogs: 4-50 lbs

Operating Instructions

The Mode Button is ☺ . Press the ☺ for 2 secs, the Green Light will come on. You turn on the collar in Sound and Vibration mode. Press the ☺ for 2 secs, Green Lights will go off. You have now turned the collar off.

What does the bark collar actually do when your dog barks?

1st bark: Progressive warning beeps for 1.5 seconds

2nd bark: Progressive warning beeps for 2.5 seconds

3rd bark: Sound for 5 seconds+Vibration for 1 seconds

4th bark: Sound for 5 seconds+Vibration for 1.5 seconds

5th bark: Sound for 5 seconds+Vibration for 2 seconds

6th bark: Sound for 5 seconds+Vibration for 3 seconds

7th bark: Sound for 5 seconds+Vibration for 4 seconds

8th bark: Sleep Mode for Safety (for 1 minute)

If the dog does not bark again within 40 secs (which is based on the last barking), then the collar will revert to the 1st correction level.



1. Charging Instructions

The collar needs to be charged when the red light continues flashing slowly for 30s, and then turns off automatically.

1. Open the Battery Charging Rubber Cover on the Anti Bark Collar, plug one end of the cable in the charging port and connect the other end to the adaptor, computer, notebook or power bank.

(Note: please make sure that the adaptor output is 5V/500-1000mAh.)

2. Plug the Lithium Polymer Charger into an electrical power outlet of ordinary household voltage(110-230V) based on your local standard.

3. The red light will be steady on when fully charged within 1.5 to 2 hours, it turns green light when charged full.

2. Testing The Collar Before Using

Take the collar in your hands facing the back side of the collar and gently blow a small puff of air towards the small hole located between the vibration prongs, you will hear a beep.

Blow a puff of air again, you will hear the second beep.

Blow for the third time and you will hear a beep and feel a mild vibration (similar to the cell phone vibration).

You may continue to do this till the 7th correction level is reached.

3. Adjusting The Sensitivity

There are two **BUTTONS** + - which used to adjust the sensitivity, and every time there will be “B” out of tone, sensitivity will gradually be enhanced or weakened. The higher sensitivity level is, the easier to trigger the collar.

Caution Notes:

1. **KEEP OUT OF THE REACH OF CHILDREN.**
2. Do not allow your dog to chew this collar. You should also attempt to minimize scratching or clawing at the casing.
3. This device is made of plastic and electronic components that are not digestible. Consult your local vet if your dog swallows any parts of this product.
4. The collar is not intended to be used as a restraining collar. If you are using a leash, use it with a separate restraining type of collar.
5. Check your pet's neck for any signs of rash or sore daily. If you observe a rash or a sore, please remove the collar for a few days.
6. This is normal but, it should not happen so often as to be confusing to your pet. Please don't use the collar if your pet

is suffering from fleas or ear mites. Constant scratching from fleas or ear mites can, at times, cause the collar to react when it is not supposed to. If these activities are evident, have your pet checked by a veterinarian for parasites.

Although the Anti-bark Collar's microprocessor is designed to differentiate your dog's individual bark from stray environmental noises, the unit may occasionally be activated by other vibrations.

Fault Finding Guide:

Q. The collar just keeps going off.

A1. The sensitivity is set too high. Please lower the sensitivity by pressing the minus "-" button.

A2. The collar is not tight enough, please tighten the collar.

Q. My dog shakes his head and the collar goes off.

A. Because dog feels so uncomfortable when wearing the collar that he/ she shakes the head and scratches the collar to activate it.

Q. My dog barks but the collar is not activated.

A. Check the battery by performing a full test. If the collar tests correctly, then you will need to either increase the sensitivity level by pressing "+" to make it easier to be activated, or tighten the collar as it might be too loose.

Q. Collar beeps but doesn't vibrate.

A. There is not enough current inside the battery to make it vibrate, please recharge the collar.

Q. The collar goes off when my dog doesn't bark.

A. The collar sometimes gives false alerts...

Don't worry about this, your dog learns very quickly that it is exactly a false alert. All dogs learn quickly that the two beeps are just two beeps when they are barking. But as a responsible dog owner, you know that the collar is designed to STOP the excessive barking.