



# TeaCup Bark Collar


**Model: MC467V**

For your dog's safety and the best training results, please read this manual carefully before use

## COMPONENTS



- 1 MC467V Anti-Bark Collar
- 2 Detachable Strap

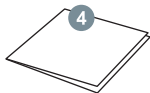

- 3 Magnetic Charging Cable
- 4 User Manual



# PRODUCT OVERVIEW



Sound Mode



Vibration Mode




Sound + Vibration Mode




Battery level indicator



Sensitivity level indicator

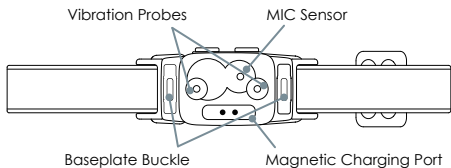

Sensitivity button

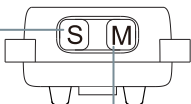

ON/OFF button (long press)  
**M**ode button (short press)



# PRODUCT INTRODUCTION

Our bark collar is designed to gently and effectively reduce unwanted barking. It uses humane training methods - a **beep**, a **vibration**, or a **combination of both** - to help correct behavior without shocks.

This model is equipped with a **smart microphone sensor** that accurately detects your dog's bark and activates the correction. The collar is lightweight, safe, and comfortable for everyday use.

## IMPORTANT NOTE FOR SMALL DOGS

This collar is designed to be **extra tiny** – perfect for very small and toy-sized dogs.

- The correction strength is carefully adjusted to stay safe and gentle for dogs of this size.
- You may also try it on small dogs, but please remember that the collar is primarily intended for the tiniest pups.

If the collar does not work well for your dog, please contact us on **WhatsApp support (+1 555 823 2158 – Quick help through chat)** for a **full refund**. We want you and your pup to be 100% happy. ❤️

## MAIN FEATURES

**Safe & Humane** – Designed with your dog's comfort and safety in mind.

**Detachable Strap** – Easily replace the strap if it wears out, helping extend the life of your collar.

**Feather-Light Design** – The main unit weighs only **0.57 oz**, and just **1.33 oz** with the strap. Comfortable even for the tiniest pups.



# MAIN FEATURES

**3 Training Modes** – Choose from **Beep**, **Vibration**, or **Beep + Vibration** to match your dog's needs.

**Adjustable Sensitivity** – Fine-tune how the microphone detects your dog's barking. Start at Level 4 and adjust up or down as needed.

**Water Resistant (IPX6)** – Withstands rain and splashes, so you can train outdoors worry-free.

**Magnetic Charging** – Easy, fast, and reliable charging with the sleek magnetic port.

**LED Display** – Quickly check the battery level, mode, and status at a glance.

## CHARGING INSTRUCTIONS

### 1) Use the Included Cable

Only charge with the magnetic cable that comes with your collar and a standard 5V/500 – 1000 mA adapter.

### 2) During Charging

- The battery icon will blink every 3 seconds.
- Other lights stay off.
- The collar will not function while charging.

### 3) Full Charge

- A full charge takes about **1.5 hours**.
- When the battery icon stays solid, charging is complete.
- Unplug the cable, then press and hold the **M button** to turn the collar on.

### **Low Battery Reminder**

When the first battery bar flashes for 30 seconds, the collar will shut down automatically.





# How to Use the Collar

## 1. Power On/Off:

- To **turn ON**: Press and hold the **M button** for about 1.5 seconds. You'll hear a beep and the screen will turn on.
- To **turn OFF**: Press and **hold** the **M button** again for 1.5 seconds to turn it off.

## 2. Select a Mode.

While the collar is on, **briefly press the M button** (do not hold) to cycle through the 3 training modes:

-  **Sound Mode**
-  **Vibration Mode**
-  +  **Sound + Vibration Mode**

## 3. Adjust Sensitivity.

**Briefly press the S button** to set a sensitivity level (1–7). Sensitivity adjusts how the **microphone detects barking sounds**.

- We recommend starting at **Level 4**.
- If the collar **misses barking**, increase the sensitivity by **1 level**.
- If the collar **activates by mistake** (false triggers), decrease the sensitivity by **1 level**.
- General guideline: Loud bark → lower sensitivity; Soft bark → higher sensitivity.

## Sensitivity Levels:

Level	Function
0	Test Mode (beeps and vibrates when you clap near the mic)
1-7	Normal use - microphone detects barking

## Test the Anti-Bark Collar

You can easily check if the collar is working properly by using **Test Mode**.

### 1. Enter Test Mode.

Briefly press the **S button** until the sensitivity level shows **0**. Then blow or speak loudly into the **MIC sensor** on the back of the collar.


### 2. Check the Response.

- First, the collar will **beep** and the sound icon will flash.
- Then it will **vibrate** and the vibration icon will flash.
- After that, all mode icons will stay lit for about **10 seconds**.

If you do **not trigger the collar again** within those 10 seconds, it will automatically **exit Test Mode** and reset to sensitivity level **7**.


## HOW TO ADJUST THE BELT

The collar should sit snugly against your dog's neck, but leave enough room for 1-2 fingers to slide between the strap and your dog's neck. For best results, center the collar on your dog's throat.

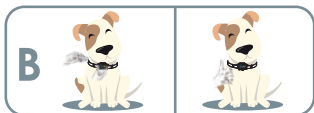


## TRIMMING THE COLLAR:


- a) Use a pen to mark the desired length, considering possible growth if your dog is young or has a thick seasonal coat.
- b) Remove the collar and carefully cut off any excess material.
- c) Before refitting, lightly seal the trimmed edge with a flame to prevent fraying.

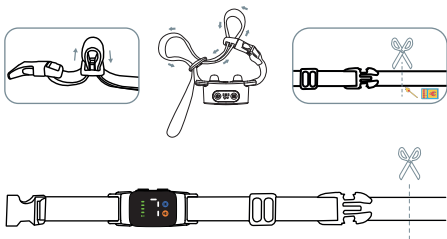

## Tips:

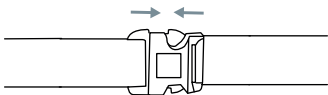

1. For daily use, simply open or close the buckle to put the collar on or take it off.

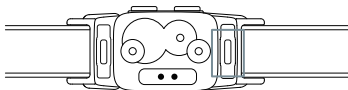

2. To replace the strap, press the baseplate buckle while pulling the strap buckle on the same side to release the old strap.



# Tips for Training Your Dog with the Anti-Bark Collar



Please don't leave your dog unattended when you first start training with the collar.



You should train your dog with commands (for example "NO!") when he or she barks. The collar will help reinforce the command.







Do not let your dog wear the collar for more than 12 hours per day.

## How It Works

The collar uses fixed correction steps in each mode.





- Each new bark must happen within **40 seconds** to move to the next step.
- If your dog does **not bark again within 40 seconds**, the collar will reset to the **first step**.

## Sound Mode Operation









Trigger	Action
1st	3-second sound + 3-second  icon flash
2nd	3-second sound + 3-second  icon flash
3rd	3-second sound + 3-second  icon flash
4th	3-second sound + 3-second  icon flash
5th+	Repeats the 4th step



## Vibration Mode Operation

Trigger	Action
1st	3-second sound + 3-second  icon flash
2nd	3-second sound + 3-second  icon flash
3rd	3-second sound + 3-second  icon flash
4th	3-second sound + 3-second  icon flash
5th+	Repeats the 4th step

## Sound + Vibration Mode Operation

Trigger	Action
1st	2-second dual activation + 2-second  +  icon flash
2nd	2-second dual activation + 2-second  +  icon flash
3rd	2-second dual activation + 2-second  +  icon flash
4th	2-second dual activation + 2-second  +  icon flash
5th+	Repeats the 4th step

## Cautions

- **Do not allow your dog to chew the collar.** Prevent scratching or clawing at the device.
- **Not edible:** The collar is made of plastic and electronic parts. If your dog swallows any piece, contact your vet immediately.
- **Not for leash use:** This collar is not designed for use with a leash. Always attach a leash to a regular walking collar instead.
- **Watch your dog:** Always observe your dog while wearing the collar. If there are any negative reactions, stop using it immediately and seek professional advice.



# FREQUENTLY ASKED QUESTIONS

**Q: Why doesn't the Bark Collar activate when my dog barks?**

**A:** First, check that the Bark Collar is securely fitted, allowing enough room for one finger between the strap and your dog's neck. Some dogs may bark softly, in which case you might need to increase the sensitivity level. If your dog has a thick coat, it can sometimes limit detection; in such cases, trim the fur close to where the collar sits.

**Q: Why does the Bark Collar activate in noisy environments, even when my dog isn't barking?**

**A:** Although the collar's bark detection is optimized, certain noises may share a similar frequency to barking, which can occasionally trigger the collar. If this happens frequently, try lowering the sensitivity level.

**Q: Can I use the Bark Collar when other dogs are playing nearby?**

**A:** Dogs often bark while playing or when excited. For your dog's comfort and safety, we do not recommend using the Bark Collar in playful or high-activity settings.

**Q: How can I tell if this Bark Collar is suitable for my dog?**

**A:** The Bark Collar is designed for healthy dogs over six months old. It should not be used on unhealthy or aggressive dogs. If you're unsure about using this collar with your dog, consult your veterinarian or a certified trainer.

**Q: Can I use any type of charger with this Bark Collar?**

**A:** No, it's recommended to use a charger with a 5V output only. Chargers with a higher output can damage the collar. If the voltage is too high, the collar will stop charging and emit a warning tone.

**Q: Will my dog stop barking completely with this collar?**

**A:** The Bark Collar is designed to effectively and humanely reduce excessive barking. It should be used when you want to discourage unnecessary barking.






# FREQUENTLY ASKED QUESTIONS

**Q: Is this Bark Collar safe and humane for my dog?**

**A:** Yes, this Bark Collar is designed to gently capture your dog's attention without causing harm. The initial vibration or beep may startle your dog, but it's intended to be a safe and humane approach.

## NEED HELP? We're Here for You

If you have **any questions** about using your collar – or need assistance with **issues, returns, or replacements** – please reach out to us anytime:

1.  **WhatsApp Support: +1 555 823 2158**  
(Quick help through chat)
2.  **Email** – Write to us at [support@elecane.com](mailto:support@elecane.com)
3.  **Online Form** – Visit <https://elecane.com/support-467>

We're always happy to help and make sure you and your pup enjoy the best possible experience with Elecane.

